

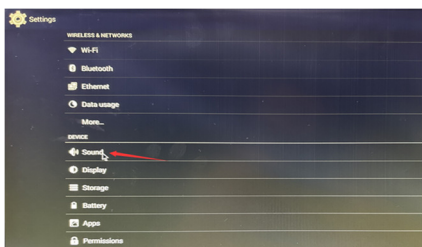
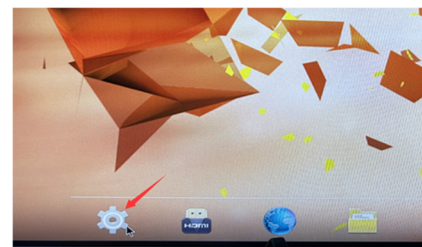


HOW TO ADJUST VOLUME ON PEHRATEK VDS-510 CENTERING MONITOR

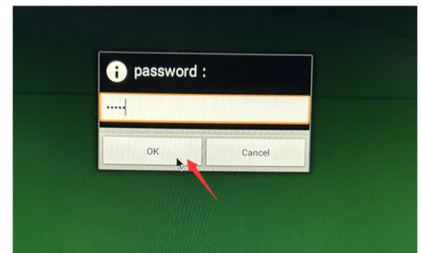

- 1) Plug a USB mouse into top jack on VDS-510 centering monitor.
- 2) Right click on mouse button to bring up "Exit" box menu
- 3) Click on "OK" to exit run mode
- 4) Enter password "10203" with on screen keyboard and "OK" to enter set up mode.
- 5) Select "settings" at bottom of set up screen.
- 6) Select "Sound"
- 7) Select "Volume" at the top of the menu to bring up adjustment bar
- 8) Drag volume bar to desired setting.
- 9) Unplug power from unit to reset back into run mode.



PEHRATEK PRODUCTS
 9285 Pierson Lake Drive
 Chaska, MN 55318
 WWW.Pehratek.com

